


## Top Attachment Instructions for Cortez Table Base

### 84" x 42" Cortez Top

1. Place Cortez top on the base.
2. Remove (6) leg attachment clips and (6) wing nuts from the hardware kit.
3. Place leg attachment clips around base ring with the bolts welded onto the table top passing through the slotted hole of the leg attachments (see picture below). Secure using wing nuts. (NOTE: Hand tighten only)

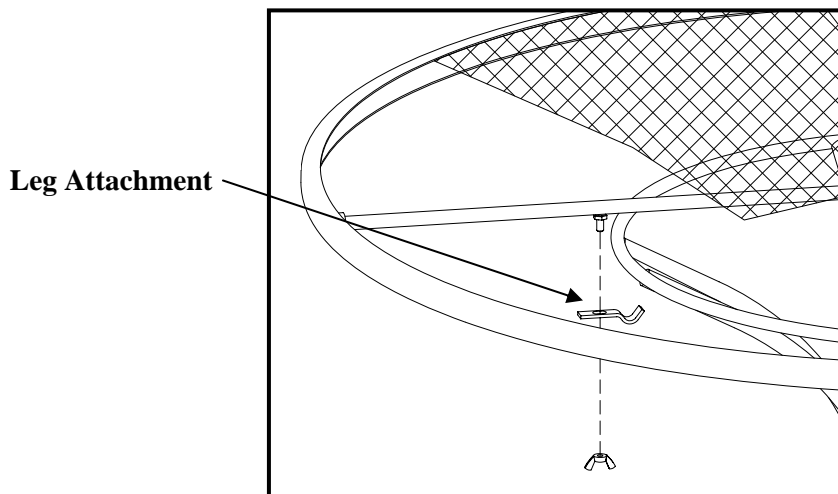

### 84" x 44" Puerto Top

1. Place Puerto top upside down on a soft surface (e.g. carpet, its own carton).
2. Remove substructure (black frame attached to underside of top) from Puerto top (it is unnecessary for this table base).
3. Place table base in desired location.
4. Set Puerto top on the table base.
5. Position the leg attachment with the slot over the substructure bolt, and the formed end securing the table base ring.
6. Insert  $\frac{3}{4}$ " bolts from kit through slots into the threaded inserts. Tighten snugly, but do not over-tighten.

### 84" x 42" Slate or Marble Top

1. Remove (6) plastic U-clips from the hardware kit.
2. Place along top rim of base as shown in figure below. (NOTE: Exact positioning of U-clips is not required.)
3. Place slate or marble top in position, centering it on the base.

