

Assembly Instructions - Tile Table Top with Fully Welded Base

Material List

- A - Base Assembly (1)
- B - Top (Mesh Assembly) (1)
- C - Attachment Brackets (4)
- D - Allen Head Bolts (4)
- E - Allen Wrench (1)
- F - Umbrella Washer (1)
- G - Tile Fabric Liner (1)
- H - Tile, (9) Whole 12" pieces
- I - Tile, (1) 12" w/center hole cut

No Additional Tools Required

Step 1: Verify you have received all parts listed in the Material List. If any parts are missing, please call Customer Service at the phone number listed below.

Note: Table bases and tops may vary from that shown in the diagram. However, assembly is the same for all.

Step 2: Place top on base and attach with supplied Allen Wrench (E) using attachment brackets (C) and Allen Head Bolts (D) as shown in Figure 2.

Note: Use caution when installing bolts into Top Assembly. **Do not over tighten.**

Step 3: Place Tile Fabric Liner (G) onto mesh surface of Top Assembly (A).

Step 4: Install Tiles (H) over the Fabric Liner.

Step 5: If using optional umbrella, use the Center Hole Cut Tile (I) in the middle and place Umbrella Washer (F) over and through the tile hole.

Note: Attachment Brackets (C) ship with the Base (A). The hex bolts and wingnuts also included are not used with this Tile Top configuration.

Assembly is now complete. Thank you very much for your purchase. Enjoy!

Customer Service

205-715-4322

Meadowcraft, Inc.
P.O. Box 1357
Birmingham, Alabama 35201 U.S.A.

"We Put Pride In The Box"

70004288

1/10/2005

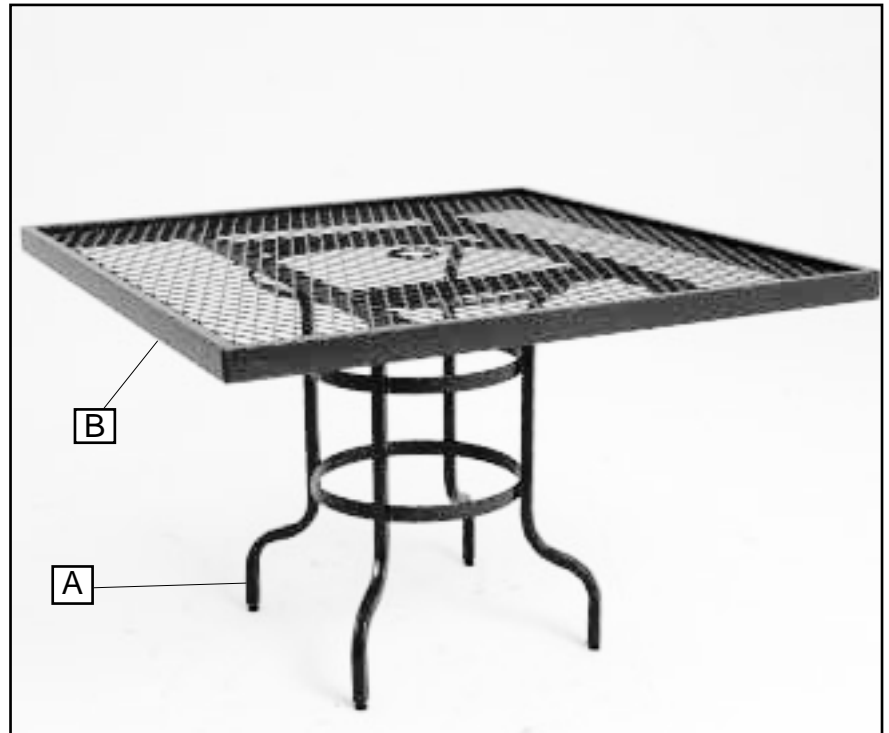


Figure 1: Top & Base Positioning

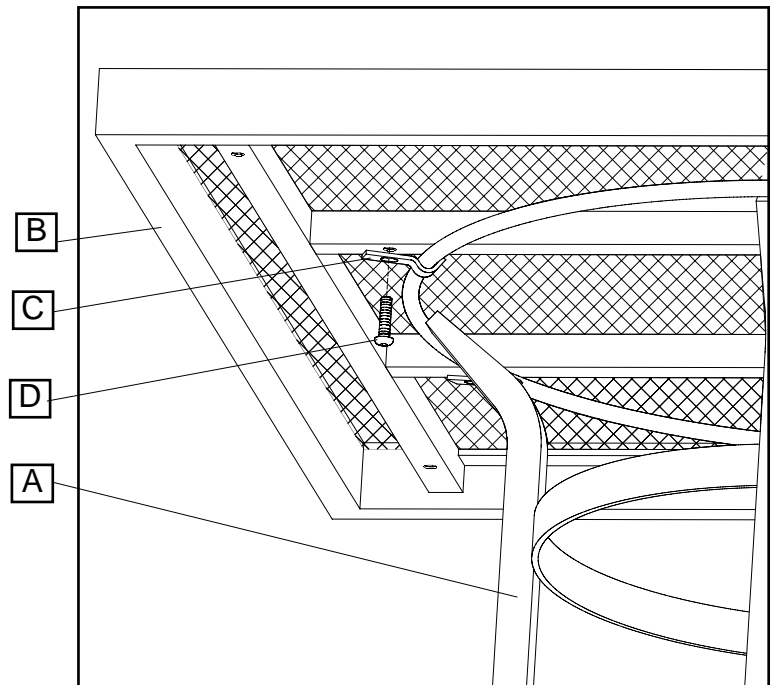


Figure 2: Top Attachment Detail